
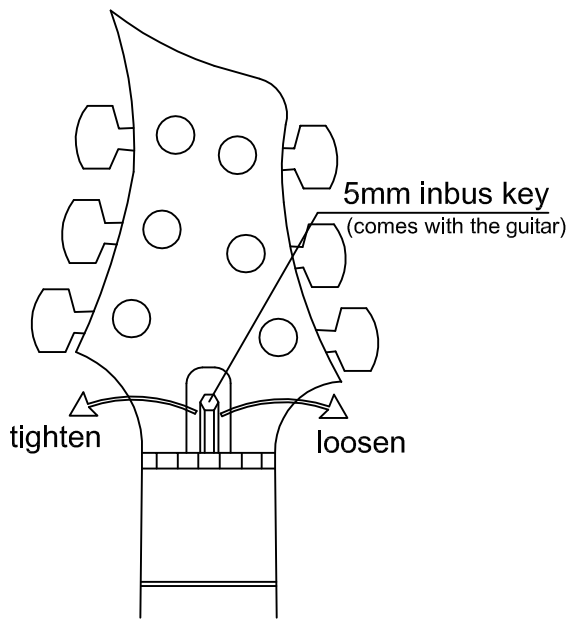


Double Acting Truss Rod adjustment on Fibenare[®] guitars

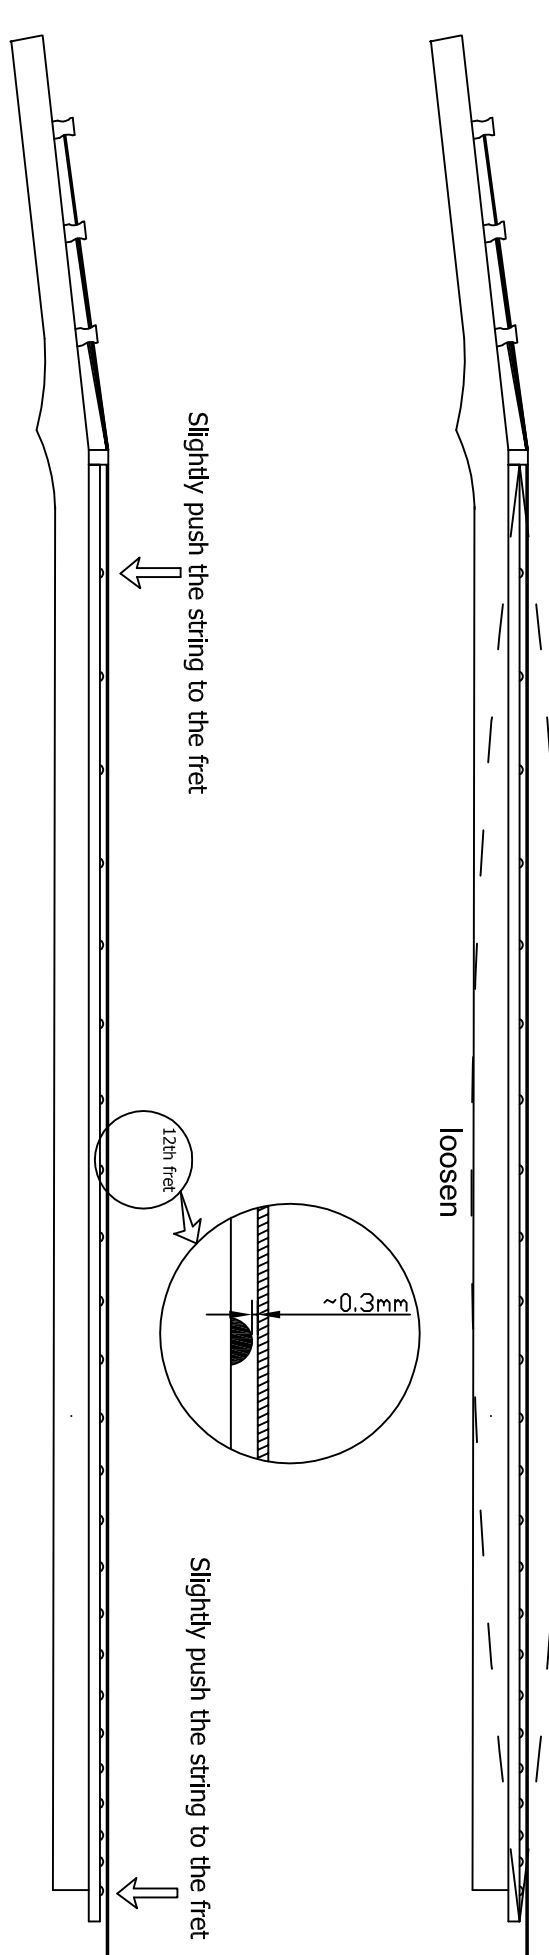

All of our guitars should be adjusted with the 5mm inbus key that comes with the instrument.

The guitar's neck must have a slight concave bow in it, this gives the strings room to vibrate without buzzing on the upper frets. However, if the neck is bowed too much the action will be too high, and playing on the guitar becomes uncomfortable.

You can set this slight bow by pushing the low E string down on the first and last frets, at the middle of the neck there should be a slight gap between the string and the frets (approximately 0.3mm).

The neck is well recommended to be set by a guitar-technician!

Be careful not to overtighten or overloosen the neck!

Warranty void if any damage comes from overtightening or overloosening the neck !